

Wooden Louvered Guard CG-750-Wood models

Installation and Assembly Instructions


Pump House, Glaisdale Drive East, Nottingham, NG8 4LY

www.pumph.co.uk Sales@pumph.co.uk

Tel: 0115 900 5858



Step 1: Arrange left and right side panels and front panel together, with the arrows pointing outwards

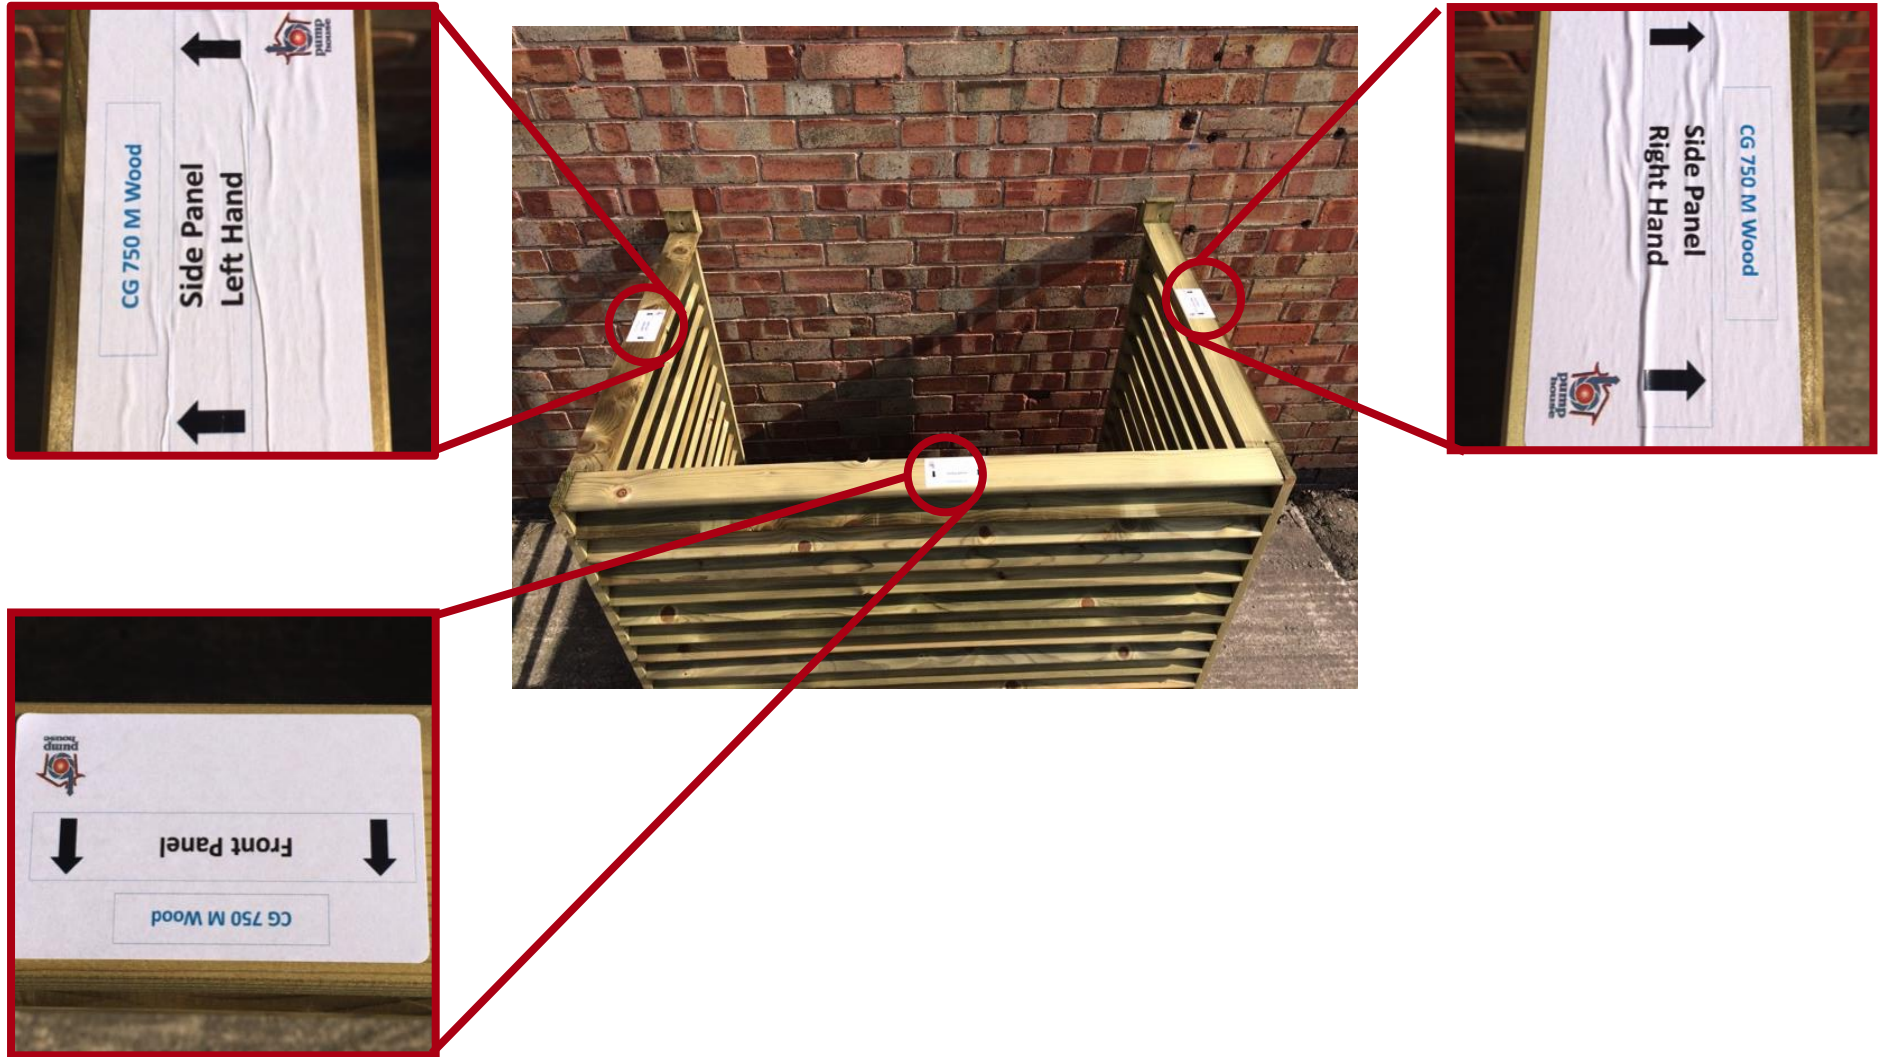


Step 2: Using 3 long screws on outside and 2 short screws on inside, attach the left hand side panel to the front panel

Outside Edge

Inside Edge



Step 3: Place back strut onto rear side panels and secure with 2 short screws

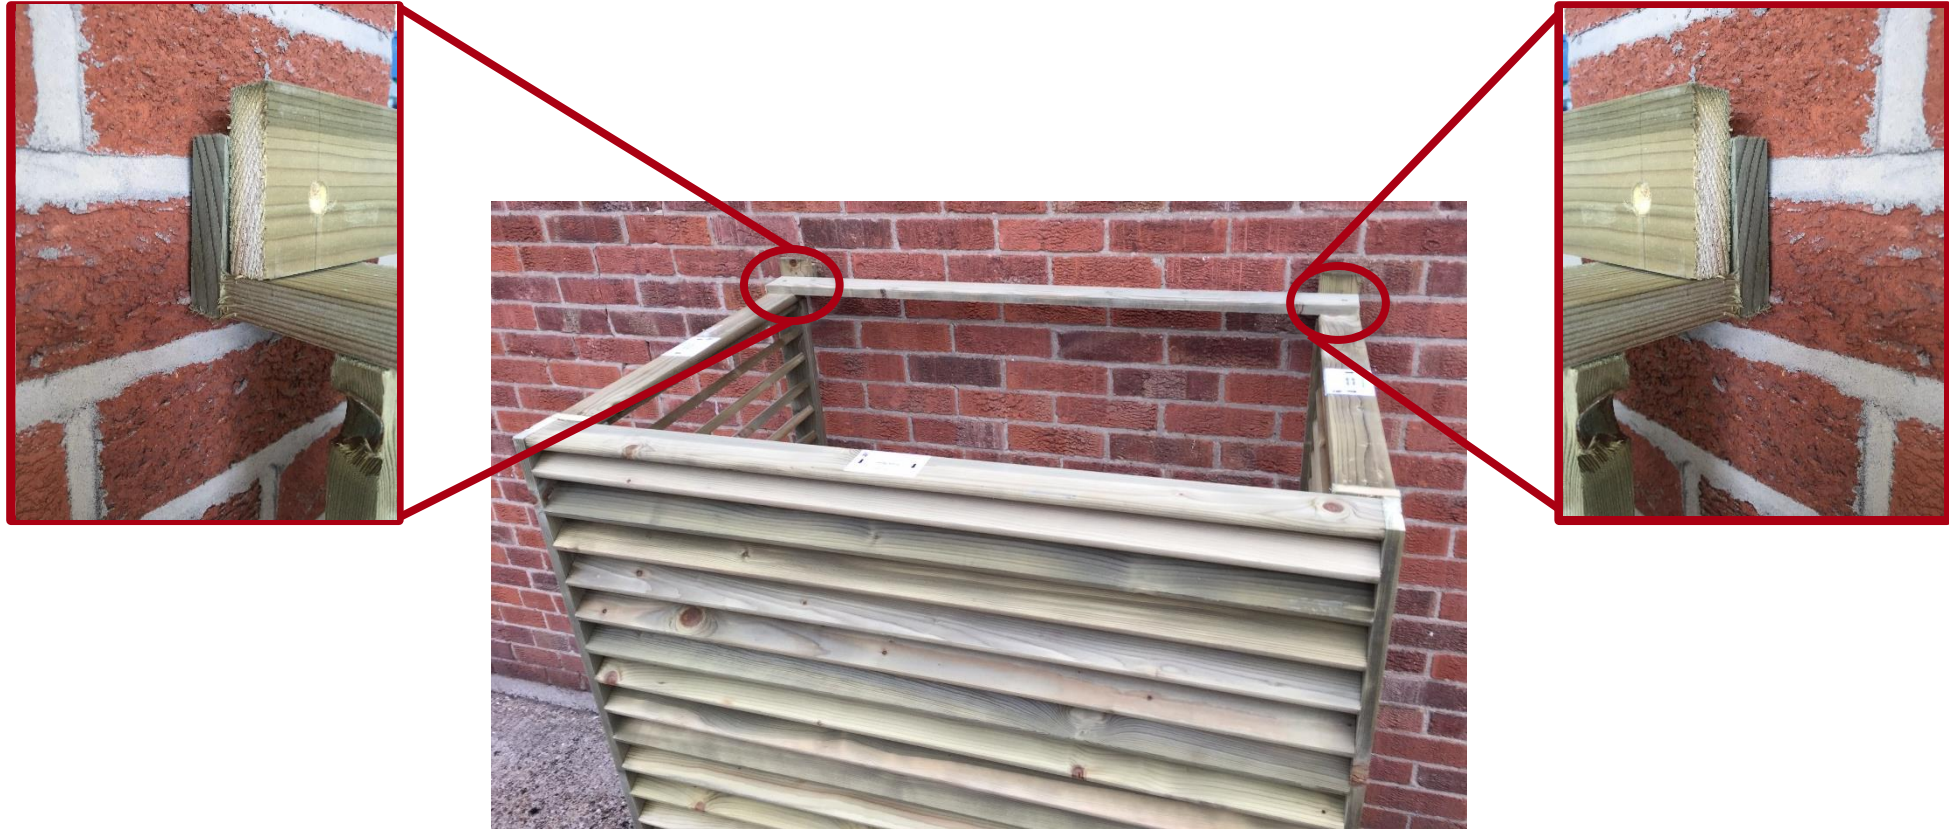

Step 4: Place top panel on top of the other panels. Use 2 short screws, one for each rear corner, which will attach the side panels to the top panel



Step 5: Overlap top panel on front panel. Use 2 long screws, one for each front corner, which will attach the front panel to the top panel

